

OptiPlex XE3 Tower

Setup and Specifications Guide



Identifier	GUID-5B8DE7B7-879F-45A4-88E0-732155904029
Status	Released

Notes, cautions, and warnings

 | **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 | **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 | **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Identifier	GUID-089FFA4B-3A62-4B51-BDE1-309C58A451D9
Status	Released

© 2017 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents


1 Set up your computer	5
2 Chassis	8
System front view.....	8
System back view.....	9
Tower motherboard layout.....	10
3 System specifications	11
Physical system dimensions.....	11
Chipset.....	12
Processor.....	12
Memory.....	13
Storage.....	14
Storage combinations.....	14
Audio.....	15
Video.....	15
Communications.....	17
Ports and connectors.....	17
System board connectors.....	18
Operating system.....	18
Power supply.....	18
Security.....	19
Environmental.....	19
4 System setup	20
Boot Sequence.....	20
Navigation Keys.....	21
System and setup password.....	21
Assigning a system password and setup password.....	22
Deleting or changing an existing system setup password.....	22
System Setup options.....	23
Updating the BIOS in Windows	29
Updating your system BIOS using a USB flash drive.....	30
Enabling smart power on.....	31
5 Software	32
Supported operating systems.....	32
Downloading drivers.....	32
Downloading the chipset driver.....	33
Intel chipset drivers.....	33
Downloading graphic drivers.....	34
Intel HD Graphics drivers.....	34
Intel Wi-Fi and Bluetooth drivers.....	35

Downloading the Wi-Fi driver.....	35
Realtek HD audio drivers.....	36
Downloading the audio driver.....	36
6 Getting help.....	38
Contacting Dell.....	38


Identifier	GUID-B865C4E3-4B5C-4213-B18E-
Status	Released

Set up your computer


- 1 Connect the keyboard and mouse.

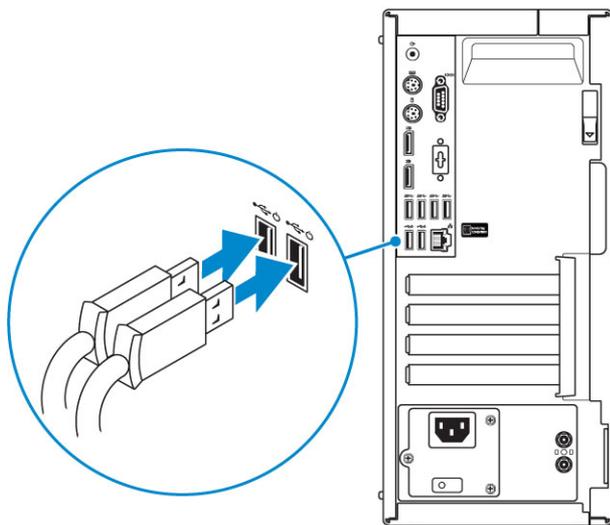

- 2 Connect to your network using a cable, or connect to a wireless network.

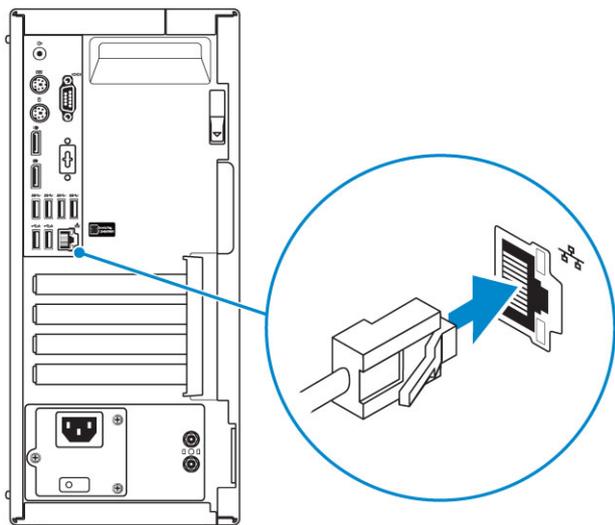


- 3 Connect the display.

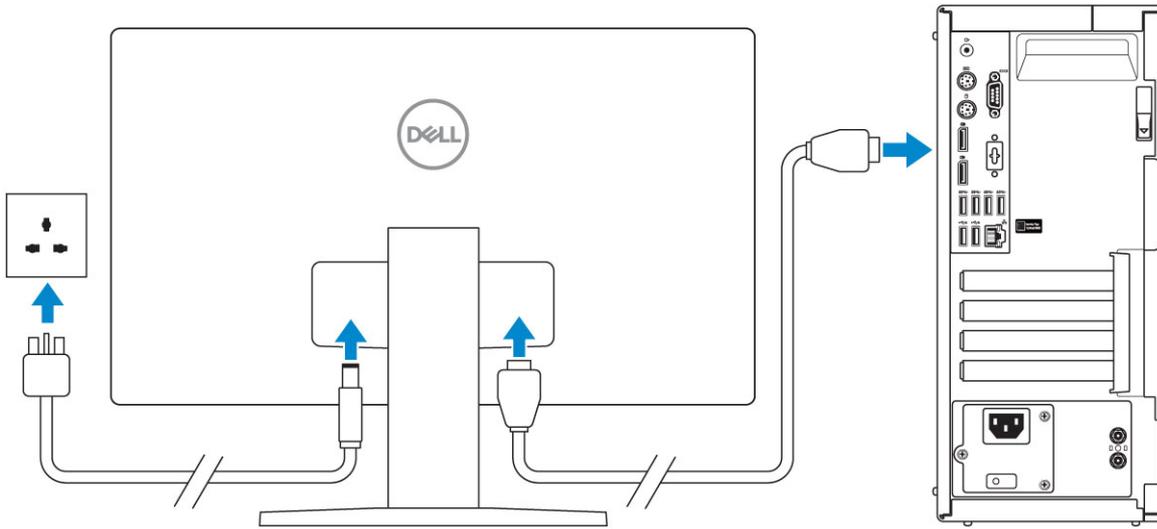


NOTE: If you ordered your computer with a discrete graphics card, the HDMI and the display ports on the back panel of your computer are covered. Connect the display to the discrete graphics card.


4 Connect the power cable.

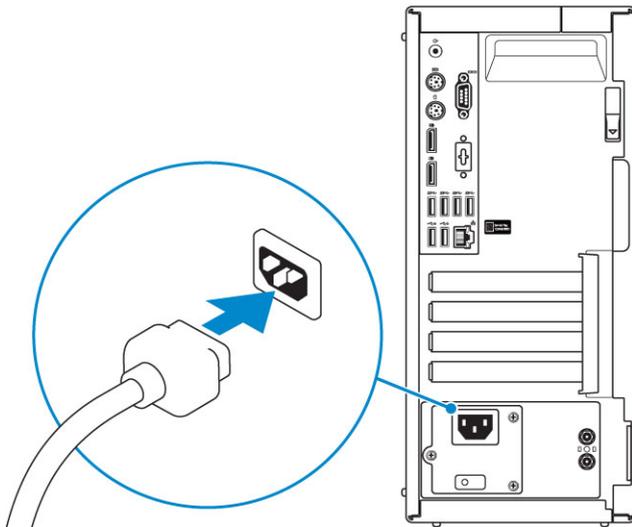


5 Press the power button.

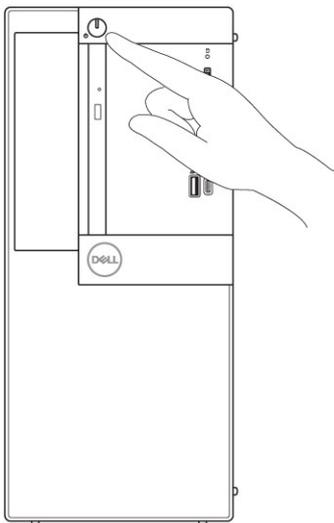

- 6 Follow the instructions on the screen to finish Windows setup:
 - a Connect to a network.

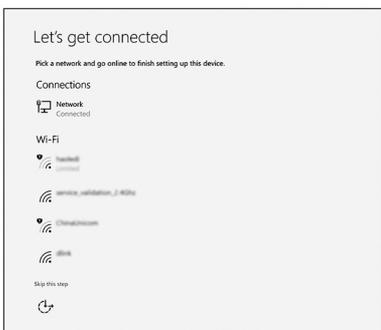

- b Sign-in to your Microsoft account or create a new account.

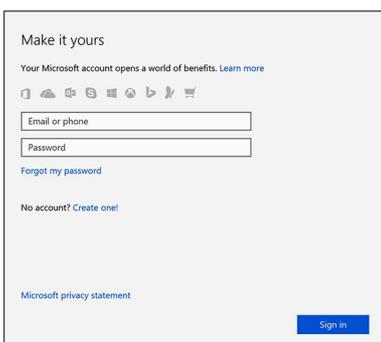


- 7 Locate Dell apps.

Table 1. Locate Dell apps



Register your computer

Dell Help & Support

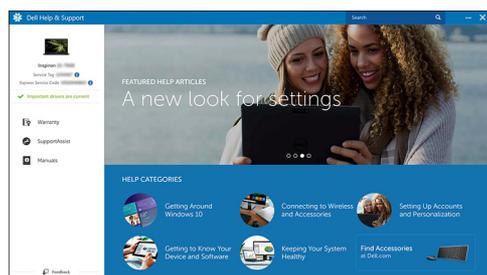


SupportAssist — Check and update your computer

Identifier	GUID-CB1A02B5-9C9E-49F6-BB49
Status	Released

Chassis

Identifier	GUID-90CDF8EC-4B25-4728-9637-92FA920F0A9C
Status	Released

System front view

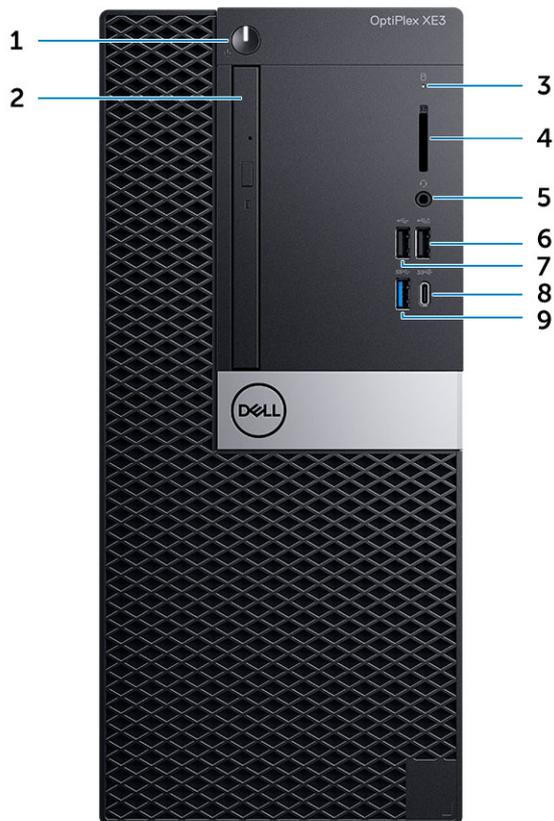

- | | | | |
|---|-------------------------------------|---|------------------------------------|
| 1 | Power button and power light | 2 | Optical drive (optional) |
| 3 | Hard drive activity light | 4 | Memory card reader (optional) |
| 5 | Headset port / Universal Audio Jack | 6 | USB 2.0 port with PowerShare |
| 7 | USB 2.0 port | 8 | USB 3.1 Gen 2 port with PowerShare |
| 9 | USB 3.1 Gen 1 port | | |


Identifier

GUID-6BA15263-D5D9-4BBD-8F53-A7C970453392

Status

Released

System back view

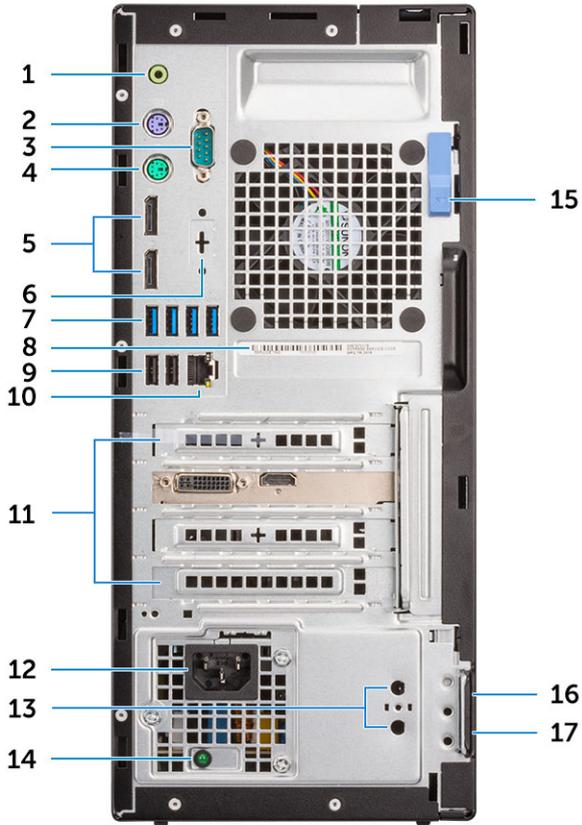

- | | | | |
|----|---|----|--|
| 1 | Line-out port | 2 | PS/2 Keyboard port |
| 3 | Serial port | 4 | PS/2 Mouse port |
| 5 | DisplayPort | 6 | DisplayPort/HDMI 2.0b/VGA/USB Type-C Alt-Mode (optional) |
| 7 | USB 3.1 Gen 1 ports | 8 | Service tag label |
| 9 | USB 2.0 ports (supports Smart Power On) | 10 | Network port |
| 11 | Expansion card slots | 12 | Power connector port |
| 13 | External antenna connectors (optional) | 14 | Power supply diagnostic light |
| 15 | Release latch | 16 | Kensington security cable slot |
| 17 | Padlock ring | | |


Identifier

GUID-3C259F41-9654-4AB7-B6CE-47A84C6B83DD

Status

Released

Tower motherboard layout

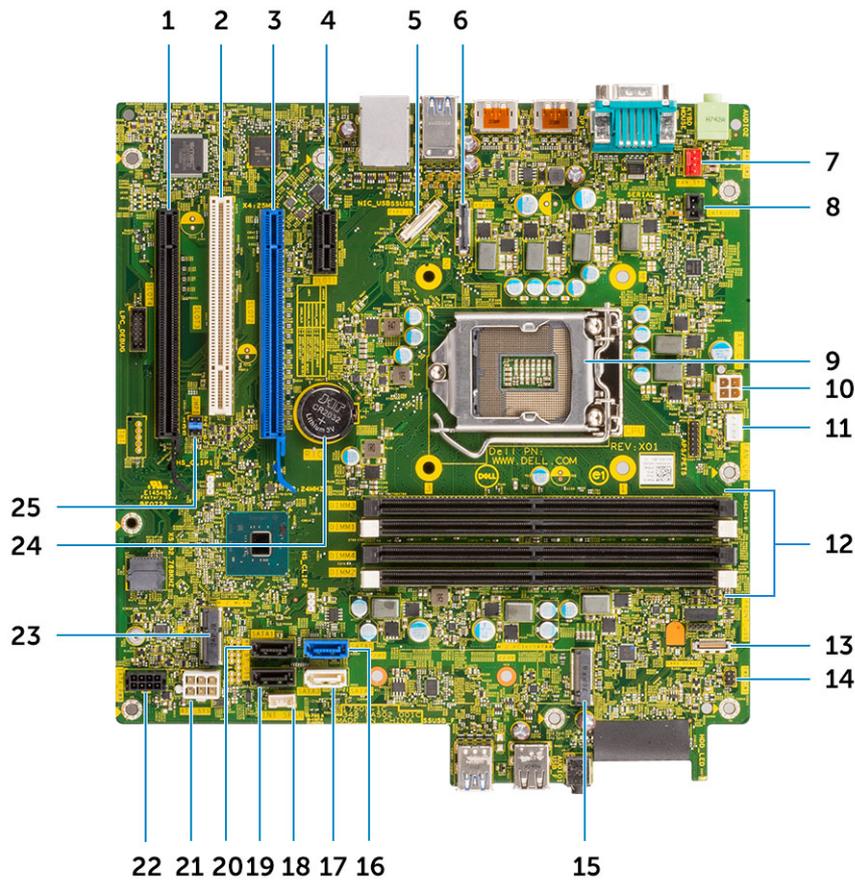

- | | | | |
|----|---|----|---|
| 1 | PCIe-X16 slot wired as x4 (Slot4) | 2 | PCI Connector (Slot3) |
| 3 | PCI-eX16 Connector (Slot2) | 4 | PCI-eX1 Connector (Slot1) |
| 5 | USB type-C Alt-mode connector | 6 | Video connector(VGA/DPI.2/HDMI2.0) |
| 7 | System fan connector(FAN_SYS) | 8 | Intruder switch connector |
| 9 | Processor Socket | 10 | CPU Power Connector(ATX_CPU) |
| 11 | CPU fan connector(FAN_CPU) | 12 | Memory Connector (DIMM1~DIMM4) |
| 13 | Memory card reader connector | 14 | Power button and power light connector |
| 15 | M.2 Socket 3 Connector (M.2 SSD) | 16 | SATA0 connector(Blue color) |
| 17 | SATA2 connector (White color) | 18 | Internal Speaker Connector (INT_SPKR) |
| 19 | SATA3 connector(Black color) | 20 | SATA1 connector(Black color) |
| 21 | ATX Power Connector(ATX_SYS) | 22 | HDD_ODD_Power Cable Connector(SATA_PWR) |
| 23 | M.2 Socket 1 connector(M.2 Wifi) | 24 | Coin cell battery(RTC) |
| 25 | CMOS_CLR/Password/Service_Mode Jumper(JMP1) | | |

Identifier	GUID-AB67ED37-0818-4592-A25C-
Status	Released

System specifications

NOTE: Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to Help and Support in your Windows operating system and select the option to view information about your computer.

Topics:

- Physical system dimensions
- Chipset
- Processor
- Memory
- Storage
- Storage combinations
- Audio
- Video
- Communications
- Ports and connectors
- System board connectors
- Operating system
- Power supply
- Security
- Environmental

Identifier	GUID-B443ECB0-B5A5-4FC9-B4D5-1FF8E5F70F79
Status	Released

Physical system dimensions

Table 2. Physical system dimensions

Chassis volume (liters)	14.77
Chassis weight (pounds / kilograms)	17.49/7.93

Table 3. Chassis dimensions

Height (inches / centimeters)	13.8/35
Width (inches / centimeters)	6.10/15.40
Depth (inches / centimeters)	10.80/27.40
Shipping weight (pounds / kilograms – includes packaging materials)	20.96/9.43

Table 4. Packaging parameters

Height (inches / centimeters)	13.19/33.50
Width (inches / centimeters)	19.40/49.40
Depth (inches / centimeters)	15.50/39.40

Identifier	GUID-EC8A9E95-C43D-4876-8FEA-D0AC668DA773
Status	Released

Chipset

Table 5. Chipset specifications

Type	Intel Q370
Non-volatile memory on chipset	Yes
BIOS configuration SPI (Serial Peripheral Interface)	256Mbit (32MB) located at SPI_FLASH on chipset
Trusted Platform Module (Discrete TPM Enabled)	24KB located at TPM 2.0 on chipset
Firmware TPM (Discrete TPM Disabled)	Available in select countries
NIC EEPROM	LOM configuration contained within LOM e-fuse – no dedicated LOM EEPROM

Identifier	GUID-BF936DE0-097D-4B6E-AE2B-13B4C1263C29
Status	Released

Processor

Global Standard Products (GSP) are a subset of Dell's relationship products that are managed for availability and synchronized transitions on a worldwide basis. They ensure the same platform is available for purchase globally. This allows customers to reduce the number of configurations managed on a worldwide basis, thereby reducing their costs. They also enable companies to implement global IT standards by locking in specific product configurations worldwide. The following GSP processors identified below will be made available to Dell customers.

NOTE: Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

Table 6. Processor specifications

Type	UMA Graphics
Intel Core i3-8100 (4 Cores/6MB/4T/3.6GHz/65W)	Intel UHD 630 Graphics integrated in the CPU
Intel Core i3-8300 (4 Cores/8MB/4T/3.7GHz/65W)	Intel UHD 630 Graphics integrated in the CPU
Intel Core i5-8400 (6 Cores/9MB/6T/up to 4.0GHz/65W)	Intel UHD 630 Graphics integrated in the CPU
Intel Core i5-8500 (6 Cores/9MB/6T/up to 4.1GHz/65W)	Intel UHD 630 Graphics integrated in the CPU
Intel Core i5-8600 (6 Cores/9MB/6T/up to 4.3GHz/65W)	Intel UHD 630 Graphics integrated in the CPU
Intel Core i7-8700 (6 Cores/12MB/12T/up to 4.6GHz/65W)	Intel UHD 630 Graphics integrated in the CPU
Intel Celeron-G4900 (2 Cores/2MB/up to 3.1GHz/54W)	Intel UHD 610 Graphics integrated in the CPU
Intel Celeron-G4920 (2 Cores/2MB/up to 3.2GHz/54W)	Intel UHD 610 Graphics integrated in the CPU
Intel Pentium Gold-G5400 (2 Cores/4MB/up to 3.7GHz/54W)	Intel UHD 610 Graphics integrated in the CPU
Intel Pentium Gold-G5500 (2 Cores/4MB/up to 3.8GHz/54W)	Intel UHD 610 Graphics integrated in the CPU
Intel Pentium Gold-G5600 (2 Cores/4MB/up to 3.9GHz/54W)	Intel UHD 610 Graphics integrated in the CPU

Identifier	GUID-7DF13399-5F30-42C5-966A-5C8EB9850267
Status	Released

Memory

Table 7. Memory specifications

Minimum memory configuration	4 GB
Maximum memory configuration	64 GB
Number of slots	4 DIMM slots
Maximum memory supported per slot	16 GB
Memory options	<ul style="list-style-type: none"> • 4 GB - 1 x 4 GB • 8 GB - 1 x 8 GB • 8 GB - 2 x 4 GB • 16 GB - 2 x 8 GB • 16 GB - 1 x 16 GB • 32 GB - 2 x 16 GB
Type	DDR4 DRAM Non-ECC memory
Speed	2666 MHz (performs at 2400 MHz on i3, Pentium, Celeron processors)

Identifier GUID-294E7C6D-9B82-4BA0-8966-280FB874C026

Status Released

Storage

Table 8. Storage specifications

Type	Form factor	Interface	Capacity
Solid-State Drive (SSD)	M.2 2280	<ul style="list-style-type: none">SATA AHCI, Up to 6 GbpsPCIe 3 x4 NVME, Up to 32 Gbps	Up to 512 GB
Hard drive (HDD)	2.5 and 3.5 inch	SATA AHCI, Up to 6 Gbps	Up to 2 TB at 5400/7200 RPM
Solid State Hybrid Drive	One 2.5 inch	SATA AHCI, Up to 6 Gbps	2.5 inch 1 TB at 5400 RPM
Optical drive	1 Slim	SATA AHCI, Up to 6 Gbps	
Intel Optane Memory	2.5 and 3.5 inch		Up to 2 TB at 5400/7200 RPM

Identifier GUID-5624AF8D-25C9-486E-8445-1E8426632FC1

Status Released

Storage combinations

Table 9. Storage combinations

Primary/Boot drive	Secondary drive
M.2 Drive	
M.2 Drive	2.5 inch HDD
M.2 Drive	3.5 inch HDD
2.5 inch HDD	
2.5 inch HDD	2.5 inch HDD
3.5 inch HDD	2.5 inch HDD
3.5 inch HDD	
2.5 inch HDD with Intel Optane	
2.5 inch HDD with Intel Optane	2.5 inch HDD
3.5 inch with Intel Optane	2.5 inch HDD
3.5 inch HDD with Intel Optane	2.5 inch HDD

Identifier	GUID-E7BDD5F1-773B-46E2-BB43-83B776D12E91
Status	Released

Audio

Table 10. Audio specifications

Controller	Realtek ALC3234
Type	Integrated
Speakers	Internal Business speaker (mono)
Interface	<ul style="list-style-type: none"> AC511 Sound Bar (optional) Microsoft PlayReady3 Ready Multi-streaming audio support Stereo headset/mic combo
Internal speaker amplifier	2W (RMS) per channel

Identifier	GUID-5EDFCC74-C5E1-4618-A8BC-5AAA60923B57
Status	Released

Video

Table 11. Video

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
Intel HD 630 Graphics	UMA	8th Generation Intel Core Processors <ul style="list-style-type: none"> Intel Core i3-8100 Intel Core i3-8300 Intel Core i5-8400 Intel Core i5-8500 Intel Core i5-8600 Intel Core i7-8700 	Integrated on CPU	Shared system memory	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz
gfx controller	UMA	8th Generation Intel Core Processors <ul style="list-style-type: none"> Intel Celeron-G4900 Intel Celeron-G4920 Intel Pentium Gold-G5400 Intel Pentium Gold-G5500 Intel Pentium Gold-G5600 	Integrated on CPU	Shared system memory	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
AMD Radeon R5 430	Discrete	N/A	GDDR5	2GB	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz
NVIDIA GeForce GT 730	Discrete	N/A	GDDR5	2GB	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz
AMD Radeon RX 550	Discrete	N/A	GDDR5	4GB	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz
Dual AMD Radeon R5 430	Discrete	N/A	GDDR5	2GB	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz
NVIDIA GeForce GTX 1050	Discrete	N/A	GDDR5	4GB	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz
Dual AMD Radeon RX 550	Discrete	N/A	GDDR5	2GB	DisplayPort 1.2 Multiple Video option (VGA, DP1.2, HDMI 2.0 and USB Type-C Alt-mode)	VGA: 2048x1536@60 Hz DisplayPort: 4096x2304@60 Hz HDMI : 1920x1080@60 Hz

Identifier	GUID-445784C5-5B55-40B1-8251-A9043055D554
Status	Released

Communications

Table 12. Communications

Network adapter	Intel i219-V Gigabit1 Ethernet LAN 10/100/1000 (Remote Wake Up, PXE and support) Intel 10/100/1000 PCIe Gigabit Network Card (optional)
Wireless	<ul style="list-style-type: none"> Qualcomm QCA61x4A Dual-band 2x2 802.11ac Wireless with MU-MIMO + Bluetooth 4.2 Intel Wireless-AC 9560, Dual-band 2x2 802.11ac Wi-Fi with MU-MIMO + Bluetooth 5 Internal Wireless Antennas External wireless connectors and antenna Support for 802.11n and 802.11ac wireless NIC

Identifier	GUID-1B4F3F6B-89C8-47EE-A061-F11728A0DA64
Status	Released

Ports and connectors

Table 13. Ports and connectors

Memory card reader	SD 4.0 memory card reader—optional
USB	<ul style="list-style-type: none"> USB 2.0 ports supports Smart Power On (Rear) Four USB 3.1 Gen 1 ports (Rear) One USB 2.0 port (Front) USB 2.0 port with PowerShare (Front) USB 3.1 Gen 1 port (Front) USB 3.1 Gen 2 port with PowerShare (Front)
Security	Kensington lock slot
Audio	<ul style="list-style-type: none"> Universal audio jack One line-out port Noise reduction array microphones
Video	<ul style="list-style-type: none"> Two DisplayPorts HDMI 2.0, DP, VGA, USB Type C (with DP Alt Mode)—optional
Network adapter	One RJ-45 (10/100/1000) connector
Serial port	One serial port—optional

Identifier	GUID-A828EBB5-0563-42E5-826A-ED9EE262D30B
Status	Released

System board connectors

Table 14. System board connectors

M.2 Connectors	<ul style="list-style-type: none"> 1 - 2230/2280 1 - 2230 (keyed to support Integrated or Discrete WiFi, Support Intel CNVi or USB2.0/PCIe)
Serial ATA (SATA) connector	4 (one Gen2 port for ODD and the rest of the ports support Gen3)
PCIe X16 slot	2
PCIe X1 slot	1
PCI slot	1
PCIe X16 slot (wired x4) slot	1

Identifier	GUID-A8FE7CDD-AB2A-482E-8AEE-D6F256FD130C
Status	Released

Operating system

Table 15. Operating system

Operating systems supported	<ul style="list-style-type: none"> Microsoft Windows 10 Home (64-bit) Microsoft Windows 10 Pro (64-bit) Microsoft Windows 10 Pro National Academic (64-bit) Microsoft Windows 10 Home National Academic (64-bit) Ubuntu 16.04 SP1 LTS (64-bit) Neokylin v6.0 SP4 (China only)
-----------------------------	---

Identifier	GUID-058F168F-760F-4BB8-9962-1596689F7896
Status	Released

Power supply

Table 16. Power supply

Input Voltage	90-264 VAC, 47 Hz/63 Hz
Input current (maximum)	4.2A/2.1A

Identifier	GUID-989E86ED-F17B-4DC3-B36B-7768505776E2
Status	Released

Security

Table 17. Security

Specifications	Optiplex XE3 Tower
<ul style="list-style-type: none"> Trusted Platform Module (Discrete TPM Enabled) Discrete TPM Disabled 	Integrated on system board
Cable Cover	Optional
Chassis Intrusion Switch	Standard
Dell Smartcard Keyboard	Optional
Chassis lock slot and loop support	Standard

¹TPM is not available in all countries.

Identifier	GUID-27DB6204-A15E-4331-8BFC-A406A293D52F
Status	Released

Environmental

NOTE: For more details on Dell environmental features, please go to the environmental attributes section. See your specific region for availability.

Table 18. Environmental

Energy efficient power supply	Standard
BFR/PVC-free chassis	No
Vertical orientation packaging support	Yes
Recyclable packaging	Yes
MultiPack packaging	Optional, US only

Identifier	GUID-A0100BF3-30E3-471A-8D1A-
Status	Released

System setup

System setup enables you to manage your hardware and specify BIOS level options. From the System setup, you can:

- Change the NVRAM settings after you add or remove hardware
- View the system hardware configuration
- Enable or disable integrated devices
- Set performance and power management thresholds
- Manage your computer security

Topics:

- [Boot Sequence](#)
- [Navigation Keys](#)
- [System and setup password](#)
- [System Setup options](#)
- [Updating the BIOS in Windows](#)
- [Updating your system BIOS using a USB flash drive](#)
- [Enabling smart power on](#)

Identifier	GUID-39EA0288-9174-49B6-ABA2-37C542A11FC5
Status	Released

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive

① **NOTE: XXX denotes the SATA drive number.**

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

① **NOTE: Choosing Diagnostics, will display the ePSA diagnostics screen.**

The boot sequence screen also displays the option to access the System Setup screen.

Identifier	GUID-B1EB55B6-FAB5-4252-ACBD-4E69ADBBB2E9
Status	Released

Navigation Keys

The following table displays the system setup navigation keys.

NOTE: For most of the system setup options, changes that you make are recorded but do not take effect until you re-start the system.

Table 19. Navigation Keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
<Enter>	Allows you to select a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
<Tab>	Moves to the next focus area.
	NOTE: For the standard graphics browser only.
<Esc>	Moves to the previous page till you view the main screen. Pressing <Esc> in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.
<F1>	Displays the System Setup help file.

Identifier	GUID-859887F0-B1B4-4530-855E-100D4FDE930A
Status	Released

System and setup password

Table 20. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

CAUTION: The password features provide a basic level of security for the data on your computer.

CAUTION: Anyone can access the data stored on your computer if it is not locked and left unattended.

NOTE: System and setup password feature is disabled.

Identifier	GUID-D91DBF33-F0AB-477E-A22D-D6CD2D066BBE
Status	Released

Assigning a system password and setup password

You can assign a new **System Password** only when the status is in **Not Set**.

To enter the system setup, press F2 immediately after a power-on or re-boot.

- 1 In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
- 2 Select **System Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not allowed.
 - Only the following special characters are allowed: space, ("), (+), (,), (-), (.), (/), (;), ([), (\), (]), (`).
- 3 Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
- 4 Press Esc and a message prompts you to save the changes.
- 5 Press Y to save the changes.
The computer reboots.

Identifier	GUID-3D32F643-EE78-4538-9D89-34BDFB68E9F1
Status	Released

Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press F2 immediately after a power-on or reboot.

- 1 In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
- 2 In the **System Security** screen, verify that **Password Status** is **Unlocked**.
- 3 Select **System Password**, alter or delete the existing system password and press Enter or Tab.
- 4 Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.

NOTE: If you change the System and/or Setup password, re-enter the new password when promoted. If you delete the System and/or Setup password, confirm the deletion when promoted.

- 5 Press Esc and a message prompts you to save the changes.
- 6 Press Y to save the changes and exit from System Setup.
The computer reboot.

Identifier GUID-F361D412-AF33-44BE-A275-37E871F705FC

Status Released

System Setup options

NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not appear.

Table 21. General

Option	Description
System Information	Displays the following information: <ul style="list-style-type: none">System Information: Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and the Express Service Code.Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channel Mode, Memory Technology, DIMM 1 Size, and DIMM 2 Size, DIMM 3 Size, and DIMM 4 Size.PCI Information: Displays SLOT1, SLOT2, SLOT3, SLOT4, and SLOT5_M.2Processor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology.Device Information: Displays SATA-0, SATA-1, SATA-2, SATA-3, SATA-4, M.2 PCIe SSD-0, LOM MAC Address, Video Controller, and Audio Controller. .
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system from the devices specified in this list. <ul style="list-style-type: none">LegacyUEFI (selected by default)
Advanced Boot Options	Allows you to select the Enable Legacy Option ROMs option, when in UEFI boot mode. By default, this option is selected.
Date/Time	Allows you to set the date and time settings. Changes to the system date and time take effect immediately.

Table 22. System Configuration

Option	Description
Integrated NIC	Allows you to control the on-board LAN controller. The option 'Enable UEFI Network Stack' is not selected by default. The options are: <ul style="list-style-type: none">DisabledEnabledEnabled w/PXE (default) <p>NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not appear.</p>
SATA Operation	Allows you to configure the operating mode of the integrated hard drive controller. <ul style="list-style-type: none">Disabled = The SATA controllers are hiddenRAID ON = SATA is configured to support RAID mode (selected by default)AHCI= SATA is configured for AHCI mode
Serial Port	Allows you to determine how the built-in serial port to operate. The options are: <ul style="list-style-type: none">Disabled

Option	Description
	<ul style="list-style-type: none"> • COM 1 – Default setting • COM 2 • COM 3 • COM 4
Drives	<p>Allows you to enable or disable the various drives on-board:</p> <ul style="list-style-type: none"> • SATA-0 • SATA-1 • SATA-2 • SATA-3 • SATA-4
Smart Reporting	<p>This field controls whether hard drive errors for integrated drives are reported during system startup. The Enable Smart Reporting option is disabled by default.</p>
USB Configuration	<p>Allows you to enable or disable the integrated USB controller for:</p> <ul style="list-style-type: none"> • Enable Boot Support • Enable Front USB Ports • Enable Rear USB Ports <p>All the options are enabled by default.</p>
Front USB Configuration	<p>Allows you to enable or disable the front USB ports. All the ports are enabled by default.</p>
Rear USB Configuration	<p>Allows you to enable or disable the back USB ports. All the ports are enabled by default.</p>
USB PowerShare	<p>This option allows you to charge the external devices, such as mobile phones, music player. This option is disabled by default.</p>
Audio	<p>Allows you to enable or disable the integrated audio controller. The option Enable Audio is selected by default.</p> <ul style="list-style-type: none"> • Enable Microphone • Enable Internal Speaker <p>Both the options are selected by default.</p>
Miscellaneous	<p>Allows you to enable or disable the various on-board devices.</p> <ul style="list-style-type: none"> • Enable PCI Slot (default option) • Enable Media Card (default option) • Disable Media Card

Table 23. Video

Option	Description
Primary Display	<p>Allows you to select the primary display when multiple controllers are available in the system.</p> <ul style="list-style-type: none"> • Auto (default) • Intel HD Graphics <p> NOTE: If you do not select Auto, the on-board graphics device will be present and enabled.</p>

Table 24. Security

Option	Description
Admin Password	Allows you to set, change, and delete the admin password.
System Password	Allows you to set, change, and delete the system password.
Internal HDD-0 Password	Allows you to set, change, and delete the computer's internal HDD.
Internal HDD-3 Password	Allows you to set, change, and delete the computer's internal HDD. i NOTE: HDD passwords are not available for PCI-e hard drives.
Strong Password	This option lets you enable or disable strong passwords for the system.
Password Configuration	Allows you to control the minimum and maximum number of characters allowed for an administrative password and the system password. The range of characters is between 4 and 32.
Password Bypass	This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart. <ul style="list-style-type: none">• Disabled — Always prompt for the system and internal HDD password when they are set. This option is selected by default.• Reboot Bypass — Bypass the password prompts on Restarts (warm boots). i NOTE: The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.
Password Change	This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set. Allow Non-Admin Password Changes - This option is enabled by default.
UEFI Capsule Firmware Updates	This option controls whether this system allows BIOS updates via UEFI capsule update packages. This option is selected by default. Disabling this option will block BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS)
TPM 2.0 Security	Allows you to control whether the Trusted Platform Module (TPM) is visible to the operating system. <ul style="list-style-type: none">• TPM On (default)• Clear• PPI Bypass for Enable Commands• PPI Bypass for Disable Commands• Attestation Enable (default)• Key Storage Enable(default)• SHA-256(default)• Disabled• Enabled (default)
Computrace	This field lets you Activate or Disable the BIOS module interface of the optional Computrace Service from Absolute Software. Enables or disables the optional Computrace service designed for asset management. <ul style="list-style-type: none">• Deactivate - This option is selected by default.• Disable• Activate
Chassis Intrusion	Allows you to control the chassis intrusion feature. You can set this option to: <ul style="list-style-type: none">• Enabled• Disabled (default)• On-Silent

Option	Description
CPU XD Support	Allows you to enable or disable the Execute Disable mode of the processor. This option is enabled by default.
OROM Keyboard Access	<p>This option determines whether users are able to enter Option ROM Configuration screens via hotkeys during boot. Specifically, these settings are capable of preventing access to Intel RAID (CTRL +I) or Intel Management Engine BIOS Extension (CTRL+P/F12).</p> <ul style="list-style-type: none"> • Enable (selected by default)— User may enter OROM configuration screens via the hotkey. • One-Time Enable — User may enter OROM configuration screens via the hotkeys on next boot only. After next boot, the setting will revert to disabled. • Disable — User may not enter OROM configuration screens via the hotkey.
Admin Setup Lockout	Allows you to enable or disable the option to enter Setup when an Administrative password is set. This option is not set by default.

Table 25. Secure Boot

Option	Description
Secure Boot Enable	<p>Allows you to enable or disable Secure Boot feature</p> <ul style="list-style-type: none"> • Disable (selected by default) • Enable
Expert key Management	<p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options are:</p> <ul style="list-style-type: none"> • PK (default) • KEK • db • dbx <p>If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are:</p> <ul style="list-style-type: none"> • Save to File- Saves the key to a user-selected file • Replace from File- Replaces the current key with a key from a user-selected file • Append from File- Adds a key to the current database from a user-selected file • Delete- Deletes the selected key • Reset All Keys- Resets to default setting • Delete All Keys- Deletes all the keys <p>NOTE: If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.</p>

Table 26. Intel Software Guard Extensions

Option	Description
Intel SGX Enable	<p>Allows you to enable or disable the Intel Software Guard Extensions to provide a secured environment for running code/storing sensitive information in the context of the main operating system.</p> <ul style="list-style-type: none"> • Disabled (default) • Enabled
Enclave Memory Size	<p>Allows you to set the Intel SGX Enclave Reserve Memory Size.</p> <ul style="list-style-type: none"> • 32 MB • 64 MB (Disabled by default)

Option	Description
	<ul style="list-style-type: none"> 128 MB (Disabled by default)

Table 27. Performance

Option	Description
Multi Core Support	<p>This field specifies whether the process will have one or all cores enabled. This option is enabled by default.</p> <p>options:</p> <ul style="list-style-type: none"> All (selected by default) 1 2 3
Intel SpeedStep	Allows you to enable or disable the Intel SpeedStep mode of the processor. This option is enabled by default.
C States Control	Allows you to enable or disable additional processor sleep states. This option is enabled by default.
Limited CPUID Value	Allows you to limit the maximum value of the processor standard CPUID function. This options is disable by default.
Intel TurboBoost	Allows you to enable or disable the Intel TurboBoost mode of the processor. This option is enabled by default.

Table 28. Power Management

Option	Description
AC Recovery	<p>Determines how the system responds when AC power is re-applied after a power loss. You can set the AC Recovery to:</p> <ul style="list-style-type: none"> Power Off Power On Last Power State <p>This option is Power Off by default.</p>
Auto On Time	<p>Sets time to automatically turn on the computer. Time is kept in standard 12-hour format (hour:minutes:seconds). Change the startup time by typing the values in the time and AM/PM fields.</p> <p>NOTE: This feature does not work if you turn off your computer using the switch on a power strip or surge protector or if Auto Power is set to disabled.</p>
Deep Sleep Control	<p>Allows you to define the controls when Deep Sleep is enabled.</p> <ul style="list-style-type: none"> Disabled Enabled in S5 only Enabled in S4 and S5 <p>This option is Enabled in S4 and S5 by default.</p>
Fan Control Override	Allows you to determine the speed of the system fan. When this option is enabled, the system fan runs at the maximum speed. This option is disabled by default.
USB Wake Support	Allows you to enable the USB devices to wake the computer from standby mode. The option "Enable USB Wake Support" is selected by default

Option	Description
Wake on LAN/WWAN	<p>This option allows the computer to power up from the off state when triggered by a special LAN signal. This feature only works when the computer is connected to AC power supply.</p> <ul style="list-style-type: none"> • Disabled - Does not allow the system to power on by special LAN signals when it receives a wake-up signal from the LAN or wireless LAN. • LAN or WLAN - Allows the system to be powered on by special LAN or wireless LAN signals. • LAN Only - Allows the system to be powered on by special LAN signals. • LAN with PXE Boot - A wakeup packet sent to the system in either the S4 or S5 state, that will cause the system to wake-up and immediately boot to PXE. • WLAN Only - Allows the system to be powered on by special WLAN signals. <p>This option is Disabled by default.</p>
Block Sleep	Allows you to block entering to sleep (S3 state) in OS environment. This option is disabled by default.
Intel Ready Mode	Allows you to enable the capability of Intel Ready Mode Technology. This option is disabled by default.

Table 29. POST Behavior

Option	Description
Numlock LED	Allows you to enable or disable the Numlock feature when your computer starts. This option is enabled by default.
Keyboard Errors	Allows you to enable or disable the keyboard error reporting when the computer starts. This option is disabled by default.
Fast Boot	<p>This option can speed up the boot process by bypassing some compatibility steps:</p> <ul style="list-style-type: none"> • Minimal — The system boots quickly, unless the BIOS has been updated, memory changed, or the previous POST did not complete. • Thorough — The system does not skip any steps in the boot process. • Auto — This allows the operating system to control this setting (this works only when the operating system supports Simple Boot Flag). <p>This option is set to Minimal by default.</p>

Table 30. Manageability

Option	Description
USB provision	This option is not selected by default.
MEBx Hotkey	This option is selected by default.

Table 31. Virtualization Support

Option	Description
Virtualization	This option specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel® Virtualization Technology. Enable Intel Virtualization Technology - This option is enabled by default.
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. Enable VT for Direct I/O - This option is enabled by default.

Table 32. Maintenance

Option	Description
Service Tag	Displays the Service Tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is set by default.
SERR Messages	Controls the SERR message mechanism. This option is set by default. Some graphics cards require that the SERR message mechanism be disabled.
BIOS Downgrade	Allows you to control flashing of the system firmware to the previous versions. This option is enabled by default. NOTE: If this option is not selected, the flashing of the system firmware to the previous versions is blocked.
Data Wipe	Allows you to securely erase the data from all the available internal storages, such as HDD, SSD, mSATA, and eMMC. The option Wipe on Next Boot is disabled by default.
BIOS recovery	Allows you to recover the corrupted BIOS conditions from the recovery files on the primary hard drive. The option BIOS Recovery from Hard Drive is selected by default

Table 33. System Logs

Option	Description
BIOS Events	Displays the system event log and allows you to: <ul style="list-style-type: none">· Clear Log· Mark all Entries

Table 34. Advanced configurations

Option	Description
ASPM	Allows you to activate the state power management. <ul style="list-style-type: none">· Auto (Default)· Disabled· L1 Only

Identifier	GUID-39A4D20E-3382-4BBB-8017-A2044689C2C8
Status	Released

Updating the BIOS in Windows

It is recommended to update your BIOS (System Setup), when you replace the system board or if an update is available. For laptops, ensure that your computer battery is fully charged and connected to a power outlet

NOTE: If BitLocker is enabled, it must be suspended prior to updating the system BIOS, and then re-enabled after the BIOS update is completed.

- 1 Restart the computer.
- 2 Go to **Dell.com/support**.
 - Enter the **Service Tag** or **Express Service Code** and click **Submit**.
 - Click **Detect Product** and follow the instructions on screen.
- 3 If you are unable to detect or find the Service Tag, click **Choose from all products**.
- 4 Choose the **Products** category from the list.

NOTE: Choose the appropriate category to reach the product page

- 5 Select your computer model and the **Product Support** page of your computer appears.
- 6 Click **Get drivers** and click **Drivers and Downloads**.
The Drivers and Downloads section opens.
- 7 Click **Find it myself**.
- 8 Click **BIOS** to view the BIOS versions.
- 9 Identify the latest BIOS file and click **Download**.
- 10 Select your preferred download method in the **Please select your download method below** window, click **Download File**.
The **File Download** window appears.
- 11 Click **Save** to save the file on your computer.
- 12 Click **Run** to install the updated BIOS settings on your computer.
Follow the instructions on the screen.

NOTE: It is recommended not to update the BIOS version for more than three revisions. For example: If you want to update the BIOS from 1.0 to 7.0, then install version 4.0 first and then install version 7.0.

Identifier	GUID-08844976-AE7C-4757-B3AD-E54CA0CCAA20
Status	Released

Updating your system BIOS using a USB flash drive

If the system cannot load into Windows but there is still a need to update the BIOS, download the BIOS file using another system and save it to a bootable USB Flash Drive.

NOTE: You will need to use a bootable USB Flash drive. Please refer to the following article for further details: <http://www.dell.com/support/article/us/en/19/SLN143196/how-to-create-a-bootable-usb-flash-drive-using-dell-diagnostic-deployment-package--dddp->

- 1 Download the BIOS update .EXE file to another system.
- 2 Copy the file e.g. O9010A12.EXE onto the bootable USB Flash drive.
- 3 Insert the USB Flash drive into the system that requires the BIOS update.
- 4 Restart the system and press F12 when the Dell Splash logo appears to display the One Time Boot Menu.
- 5 Using arrow keys, select **USB Storage Device** and click Return.
- 6 The system will boot to a Diag C:\> prompt.
- 7 Run the file by typing the full filename e.g. O9010A12.exe and press Return.
- 8 The BIOS Update Utility will load, follow the instructions on screen.



Figure 1. DOS BIOS Update Screen

Identifier	GUID-BA107C84-45F9-4B4C-B103-DD9B316D6D1A
Status	Released

Enabling smart power on

To enable Smart Power On and the ability to wake a system from S3, S4, and S5 sleep states with a move of a mouse or press of a key on the keyboard, perform these steps:

- 1 Make sure the following BIOS settings under **Power Management** setup option are set as mentioned here:
 - USB Wake Support as Enabled.
 - Deep Sleep Control as Disabled.
- 2 Connect a keyboard, mouse, or wireless USB dongle to the Smart Power On USB port(s) on the back of your system.
- 3 Disable Fast startup in the Operating System:
 - a Search and open **Power options** in the Start Menu.
 - b Click **Choose what the power buttons do** on the left side of the window.
 - c Under **Shutdown settings**, make sure **Turn on fast startup** is disabled.
- 4 Reboot your system so the changes can take effect. The next time when your system goes to sleep or is shut down, any use of the mouse or keyboard will wake it up.

Identifier	GUID-B90717C6-409E-4298-B1F3-7
Status	Released

Software

Identifier	GUID-6F57BFD0-F398-4082-B3E7-1B32C1624101
Status	Released

Supported operating systems

The following list shows supported operating systems:

Table 35. Supported operating system

Supported operating systems	Operating System Description
Microsoft Windows	<ul style="list-style-type: none"> Microsoft Windows 10 Home (64-bit) Microsoft Windows 10 (64-bit) Professional Microsoft Windows 7 (32/64 bit) Professional <p>NOTE: Microsoft Windows 7 is not supported with the Intel 7th Generation processors.</p>
Other	<ul style="list-style-type: none"> Ubuntu 16.04 LTS Neokylin V6.0
OS Media Support	<ul style="list-style-type: none"> Optional USB optical drive

Identifier	GUID-0AC3AB73-2DA6-46CA-BAF1-364A5CC3F1C5
Status	Released

Downloading drivers

- 1 Turn on the computer.
- 2 Go to **Dell.com/support**.
- 3 Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.

NOTE: If you do not have the Service Tag, use the auto detect feature or manually browse for your computer model.

- 4 Click **Drivers and Downloads**.
- 5 Select the operating system installed on your computer.
- 6 Scroll down the page and select the driver to install.
- 7 Click **Download File** to download the driver for your computer.
- 8 Navigate to the folder where you saved the driver file, after the download is complete.
- 9 Double-click the driver file icon and follow the instructions on the screen.

Identifier	GUID-5E9821D6-6A05-4A2D-8D1B-140B081BF649
Status	Released

Downloading the chipset driver

- 1 Turn on the computer.
- 2 Go to **Dell.com/support**.
- 3 Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.
i | **NOTE: If you do not have the Service Tag, use the autodetect feature or manually browse for your computer model.**
- 4 Click **Drivers and Downloads**.
- 5 Select the operating system installed in your computer.
- 6 Scroll down the page, expand **Chipset**, and select your chipset driver.
- 7 Click **Download File** to download the latest version of the chipset driver for your computer.
- 8 After the download is complete, navigate to the folder where you saved the driver file.
- 9 Double-click the chipset driver file icon and follow the instructions on the screen.

Identifier	GUID-448D5E85-EBAD-426D-A4EC-062DCD3DADEC
Status	Released

Intel chipset drivers

Verify if the Intel chipset drivers are already installed in the computer.


i | **NOTE: Click Start > Control Panel > Device Manager**

or


In Search the web and Windows, type **Device Manager**

Table 36. Intel chipset drivers

Before installation

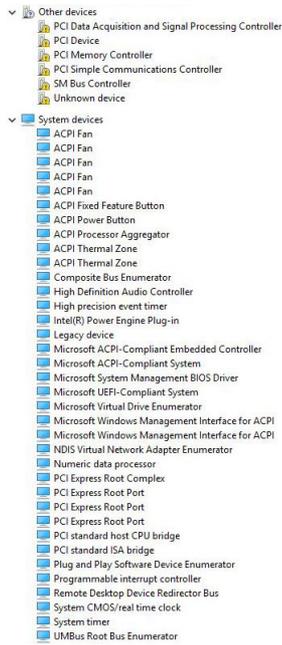

After installation

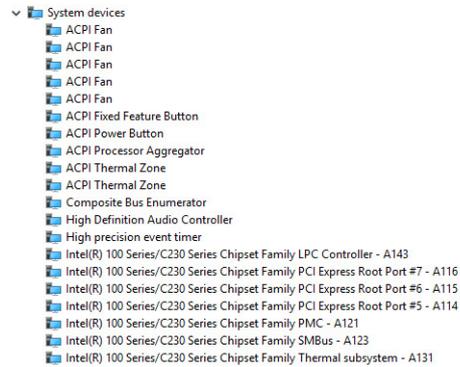

Identifier GUID-9C5A0845-9D8A-4F61-90E1-88B74D2A0F4D

Status Released

Downloading graphic drivers

- 1 Turn on the computer.
- 2 Go to **Dell.com/support**.
- 3 Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.
 - ① **NOTE:** If you do not have the Service Tag, use the auto detect feature or manually browse for your computer model.
- 4 Click **Drivers and Downloads**.
- 5 Click **Find it myself** tab.
- 6 Select the operating system installed on your computer.
- 7 Scroll down the page and select the graphic driver to install.
- 8 Click **Download File** to download the graphic driver for your computer.
- 9 After the download is complete, navigate to the folder where you saved the graphic driver file.
- 10 Double-click the graphic driver file icon and follow the instructions on the screen.

Identifier GUID-A1A90553-A3B7-4CFE-97E9-F61CB2CE9364

Status Released

Intel HD Graphics drivers



Verify if the Intel HD Graphics drivers are already installed in the computer.

① **NOTE:** Click **Start > Control Panel > Device Manager**.

or

Tap Search the web and Windows and type **Device Manager**

 Table 37. Intel HD Graphics drivers

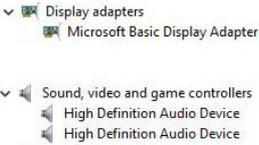Before installation	After installation
	

Identifier	GUID-586E10B4-0D99-4D8D-96AD-045161E2DEA1
Status	Released

Intel Wi-Fi and Bluetooth drivers

In the Device Manager, check if the network card driver is installed. Install the driver updates from dell.com/support.

- > Audio inputs and outputs
- > Bluetooth
- > Computer
- > Disk drives
- > Display adapters
- > Firmware
- > Human Interface Devices
- > Imaging devices
- > Keyboards
- > Memory technology devices
- > Mice and other pointing devices
- > Monitors
- ▼ Network adapters
 - Bluetooth Device (Personal Area Network)
 - Bluetooth Device (RFCOMM Protocol TDI)
 - Dell Wireless 1820 802.11ac
 - Intel(R) Ethernet Connection (2) I219-LM
- > Ports (COM & LPT)
- > Print queues
- > Processors
- > Security devices
- > Software devices
- > Sound, video and game controllers
- > Storage controllers
- > System devices
- > Universal Serial Bus controllers

In the Device Manager, check if the Bluetooth driver is installed. Install the driver updates from

dell.com/support.

Identifier	GUID-79B2AA37-93AF-4427-8701-0541EC80AA4E
Status	Released

Downloading the Wi-Fi driver

- 1 Turn on your computer.
- 2 Go to dell.com/support.
- 3 Click **Product Support**, enter the Service Tag of your computer and click **Submit**.

 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**

- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page and expand **Network**.
- 6 Click **Download** to download the Wi-Fi driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the Wi-Fi driver file.
- 8 Double-click the driver file icon and follow the instructions on the screen.

Identifier	GUID-2E053C87-DCAC-44E7-8ECD-B2591EA5437E
Status	Released

Realtek HD audio drivers

Verify if the Realtek audio drivers are already installed in the computer.

Table 38. Realtek HD audio drivers

- >  Audio inputs and outputs
- >  Bluetooth
- >  Computer
- >  Disk drives
- >  Display adapters
- >  Firmware
- >  Human Interface Devices
- >  Imaging devices
- >  Keyboards
- >  Memory technology devices
- >  Mice and other pointing devices
- >  Monitors
- >  Network adapters
- >  Ports (COM & LPT)
- >  Print queues
- >  Processors
- >  Security devices
- >  Software devices
- ▼  Sound, video and game controllers
 -  AMD High Definition Audio Device
 -  Realtek Audio
- >  Storage controllers
- >  System devices
- >  Universal Serial Bus controllers

Identifier	GUID-BE002E1F-B22E-47D7-8D45-90737D1DE4CA
Status	Released

Downloading the audio driver

- 1 Turn on your computer.
- 2 Go to **dell.com/support**.
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.

 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**

- 4 Click **Drivers & downloads > Find it myself**.
- 5 Scroll down the page and expand **Audio**.
- 6 Click **Download** to download the audio driver.

- 7 Save the file, and after the download is complete, navigate to the folder where you saved the audio driver file.
- 8 Double-click the audio driver file icon and follow the instructions on the screen to install the driver.

Identifier	GUID-BE16C181-0959-44C3-B434-
Status	Released

Getting help

Identifier	GUID-7A3627F9-0363-4515-A1D4-1B7878F4B8C4
Status	Released

Contacting Dell

NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Go to **Dell.com/support**.
- 2 Select your support category.
- 3 Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
- 4 Select the appropriate service or support link based on your need.